


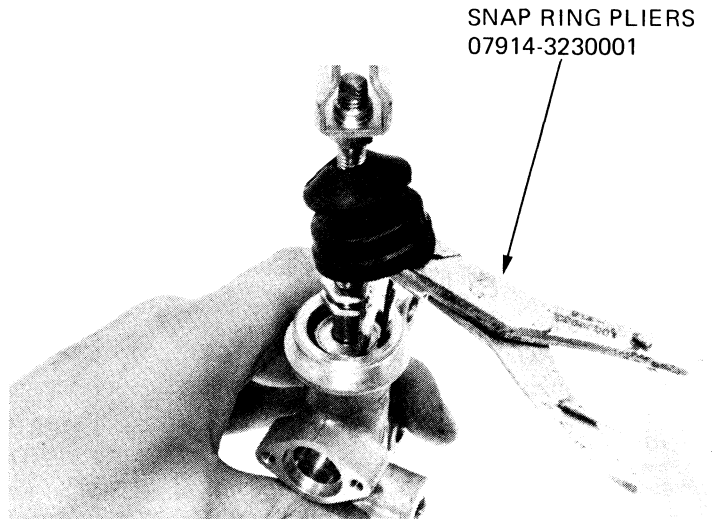

Remove the rubber cover.


Remove the circlip and push rod from the master cylinder body.



Remove the master piston, primary cup and spring.

It may be necessary to apply a small amount of air pressure to the fluid outlet to remove the master piston and primary cup.

Clean all parts with brake fluid.

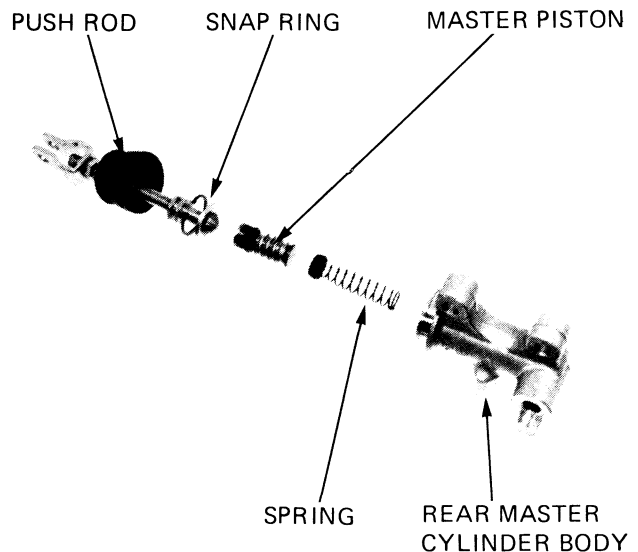

### CYLINDER I.D. INSPECTION

Measure the inside diameter of the master cylinder bore.

**SERVICE LIMIT: 14.055 mm (0.5533 in)**

Check for scores, scratches or nicks.

### PISTON O.D. INSPECTION

Measure the master piston O.D.

**SERVICE LIMIT: 13.945 mm (0.5490 in)**

Check the primary cup and secondary cup for damage.

