

## PREFACE

This manual covers the construction, function and servicing procedures of the Honda BF8D, BF9.9D, BF10D, BF8B, BF10B, BFP8D, BFP9.9D, BFP10D, BFP8B and BFP10B outboard motors. (BFP8D, BFP9.9D, BFP10D, BFP8B and BFP10B: Power thrust type)

Careful observance of these instructions will result in better, safer service work.

Pay attention to these symbols and their meaning:

**▲ WARNING** Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

**CAUTION:** Indicates a possibility of personal injury or equipment damage if instructions are not followed.

ALL INFORMATIONS, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

Honda Motor Co., Ltd.  
Service Publications Office

## CONTENTS

<b>SPECIFICATIONS</b>	<b>1</b>
<b>SERVICE INFORMATION</b>	<b>2</b>
<b>MAINTENANCE</b>	<b>3</b>
<b>PROPELLER/GEAR CASE/EXTENSION CASE</b>	<b>4</b>
<b>ENGINE COVERS</b>	<b>5</b>
<b>FUEL SYSTEM</b>	<b>6</b>
<b>RECOIL STARTER</b>	<b>7</b>
<b>ENGINE REMOVAL/INSTALLATION</b>	<b>8</b>
<b>FLYWHEEL/TIMING BELT</b>	<b>9</b>
<b>CYLINDER HEAD/VALVES/OIL PUMP</b>	<b>10</b>
<b>CRANKCASE/CRANKSHAFT/PISTON</b>	<b>11</b>
<b>OIL CASE/STERN BRACKET/SWIVEL CASE</b>	<b>12</b>
<b>SHIFT LINKAGE</b>	<b>13</b>
<b>STEERING ROD/REMOTE CONTROL BOX</b>	<b>14</b>
<b>TILLER HANDLE</b>	<b>15</b>
<b>ELECTRICAL EQUIPMENT</b>	<b>16</b>
<b>OPERATION</b>	<b>17</b>
<b>WIRING DIAGRAMS</b>	<b>18</b>